


ANALOG TALKING WATCH with DUAL VOICE

1. Pull out crown to adjust hour and minute hand. Then push back the crown to normal positions.

2. In normal time mode, press S1 to activate voice chip to speak time.

3. When alarm is on, in normal time, use pin to press S2 to activate voice chip to speak alarm time.

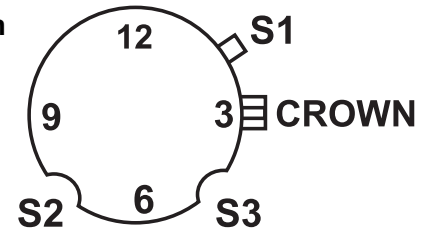

4. In normal time mode, press S1 twice to activate voice chip to speak the calendar.

5. **To set Female or Male Voice**

Press S1 to change mode status circularly between female voice or male voice. Once the female or male voice is selected then set the Time, Alarm and Calendar by using a pin to press S2 mode status

6. Use pin to press and hold S2 to change mode status circularly as following (each push of S2 advances to): Alarm sound setting → Alarm hour setting → Alarm minute setting → Year setting → Month setting Date setting → Time hour setting → Time minute setting → 12/24 hour setting → Normal Time.

7. **Chime on/off setting**

Use pin to press S3 to enter chime on/off setting mode, (it will speak the existing chime setting), each push of S3 to select either chime on or chime off.

8. **Alarm on/off setting**

Use pin to press S2 to enter alarm on/off setting mode, (it will speak the existing alarm setting), each push of S2 to select either alarm on or alarm off.

9. **Alarm sound setting**

Use pin to press S2 to enter alarm sound setting mode. (it will sound the existing alarm sound), each push of S2 to choose any one of the 3 alarm sounds either "Dong Dong" ,or "Rooster" ,or "Bi Bi"

10. **To set alarm time**

a. Use a pin to press S2 to enter alarm hour setting mode, use pin to press S3 to set alarm time hour. (each push of S3 advances voice time one hour)

b. Use a pin to press S2 to enter alarm minute setting mode, use pin to press S3 to set alarm time minute. (each push of S2 advances voice time one minute).

11. **To set calendar**

a. Use a pin to press S2 to enter year setting mode, press S3 to set year.

b. Use a pin to press S2 to enter month setting mode, press S3 to set month.

c. Use a pin to press S2 to enter date setting mode, press S3 to set date.

12. **To set Time**

a. Use a pin to press S2 to enter time hour setting mode, use pin to press S3 to set time hour. (each push of S3 advances voice time one hour)

b. Use a pin to press S2 to enter time minute setting mode, use pin to press S3 to set time minute. (each push of S2 advances voice time one minute).

13. **12/24 time setting**

Use a pin to press S2 to enter the 12/24 hour setting, (it will speak the existing setting), use a pin to press S3 to select either 12 hour time system or 24 hour time system.