

Curve Talking Clock Instructions

Item # 99*U6695

Modes

Press B1 (Mode) button to change mode status: Time display mode (di di di) to Time set mode (di) to Alarm time set mode (di di), and back again.

In time display mode, the display will show the time only. In time set mode, the display will show the time blinking. In alarm time set mode, the time will blink and the letters AL will appear between the hour and minute display.

How it works

From time-display mode, press B1 (Mode) button once to enter time-set mode and the display will be flashing in the mean time. Press B3 (Hour) and B2 (Minute) buttons to adjust the hour and minute individually until the correct time is displayed.

To set the alarm time

From time-display mode, press B1 (Mode) button twice to enter alarm-time-set mode. "AL" will be displayed and the time display will be flashing in the mean time. Then follow the same was as for wetting time to set desired alarm time.

To adjust the volume

Volume adjustable by shifting the B5 "VOLUME" switch (not available for model UT6658)

To turn on/off the alarm

In the time-display mode, press B3 (Alarm) button to turn on/off the alarm.

- a) While the alarm is on, a bell symbol will be displayed. The alarm will sound at the time set and will last for one minute if there is no interruption. Stop the alarm sound by tapping B4 (Talking) button (the sound will stop after one time's announcement.)
- b) While the alarm is off, the bell symbol will disappear from the display.

To enable/delete the hourly report function

In the display mode, press B2 (Hourly report button) to turn on/off the function:

- a) While the hourly-report function is on, a sound wave symbol will be displayed.

b) While the hourly-report function is off, the sounds wave symbol will disappear.

To insert batteries and start the clock

Remove the battery hatch from the bottom of clock and insert two (2) AA batteries (not included) following the diagram in the battery compartment showing the battery polarity. Replace the hatch.

Attention

If the LCD screen fades and the sound becomes weak or the function is abnormal, please change the battery.