3:00 a.m. If your watch is unable to receive the radio signal, it will continue to function in the same way as a standard watch. The time will be adjusted automatically the next time your watch receives the time signal.

Make sure the overnight position for the watch is at least six feet away from any household electrical appliances as they may cause interference with the time-setting radio signal. Throughout the automatic time setting, metal (including the metal keychain or key ring) should not touch the case back as that will also interfere with the radio signal.

Note: The watch must be set to the right country (please see "Set Time Zone" section) before it can receive either the automatic or a manual time-setting radio signal.

MANUAL SIGNAL RECEPTION

Note: Please wait 1 minute before doing the following if you have pressed any button.

The watch must be set to the correct country time zone (see the previous "Set Time Zone" section) before you can perform the following manual signal setting.

To obtain manual signal reception, place the watch face down on a flat surface near a non-metallic window. Please don't hold it in your hand.

While the watch is in the Real Time mode:

- Press and hold the TALK button until the LCD display shows the blinking Antenna Strength Icon (the colon between the hour and minute displayed on the watch will stop blinking when attempting to receive the time-and-date setting signal).
- 2. The watch takes about 5 to 14 minutes to pick up the signal. Wait until the watch has finished the signal-receiving process.
- After the signal reception, push the TALK button 4 times. If the reception was successful, a small antenna icon will be
 displayed and the watch will speak "[Country Name]" followed by "Time Updated." If the reception failed, the watch will
 say "[Country Name]" followed by "Time Not Updated."

Reception Status Check

There is a radio tower icon on the LCD indicating the signal reception status of the watch. When the icon is displayed, it indicates that the watch was able to update the signal in the last 24 hours. If the watch was unable to receive the radio signal, the radio tower icon will not be displayed.

You can also check signal reception status by pressing the TALK button 4 times.

If the reception was successful, the watch will say "[Country Name]" followed by "Time Updated." If the reception failed, the watch will say "[Country Name]" followed by "Time Not Updated."

(In some areas with poor reception, the signal may not update every night. Try moving the watch to a new location. However, there is no need for concern as the watch is very accurate and can miss a few of the nightly updates without any serious loss of accuracy).

Set Daily Alarm (Total 5 Alarms):

- 1. Press the ALARM button (long press) until the LCD displays the alarm number 1 (AL1).
- Press ALARM button one by one to select the alarm number (AL1 through AL5, in total 5 alarms).
- 3. After the desired alarm number is chosen: Press the HOUR button to set alarm hour (watch will say the alarm hour).
- Press the MINUTE button to set the alarm minute (watch will say the alarm minute).
- Press the ALARM button to cycle through the slarm numbers to confirm that you are finished setting the alarm hour and
 minute. If not, the watch will automatically confirm your new setting after 1 minute.
- 6. After confirmation, the watch will speak the new Alarm Time.

Note:

- The Alarm will sound a beep for 30 seconds when the alarm goes off. You can turn off the alarm by pressing any button.
- However, the Alarm is a daily alarm, so ever if you turn off the "BEEP" sound, the alarm will go off again the following
- To descrivate the daily alarm, follow the Alarm Off setting procedure below.
- Each time you stop the beeping sound the watch will announce the Alarm Time.

Alarm ON/OFF:

- Press and hold the ALARM button until the LCD displays the slarm number 1 (ALI);
- Press the ALARM button one by one to select the alarm number (AL1 to AL5, in total 5 alarms);
- After the alarm number is found: Press the TALK button repeatedly to cycle through turning the alarm on or off (the watch will announce "Alarm on" or "Alarm off" and the Alarm icon will appear or disappear);
- 4. Press the ALARM button to confirm and the watch will make a BEEP sound and exit to Real Time mode.

When the Alarm is confirmed as OFF, the watch says "Alarm OFF".

This watch will set automatically from the Atomic Radio Signal. However, you can also set the time manually when no radio signal is available.

However, the calendar date can only be set by radio signal and cannot be set manually.

Manual Time Setting

A. Manual Hour setting

- 1. Press HOUR button once;
- 2. The LCD shows Hour: Minute flashing (the watch will exit if you press the HOUR button again);
- 3. Press the TALK button one by one to set hour (the watch will announce the hour);
- 4. Press the HOUR button once to confirm the setting (the watch says the new time).

B. Manual Minute setting

- 1. Press MINUTE button once;
- 2. The LCD shows Hour: Minute flashing (the watch will exit if you press the MINUTE button again):
- 3. Press the TALK button one by one to set minute (the watch will announce the minute);
- 4. Press MINUTE button once to confirm the setting (the watch will announce the new time).

If you accidentially set the watch to a different (wrong) time then you can bring your watch back to the local time by performing a "Manual Signal Reception" or just place it near a window overnight to sync with the Atomic radio-controlled time.

Low Battery Indication

When battery is low, the LCD shows a blinking low battery icon. The voice, signal reception and backlight functions will not operate. These will resume normally after the battery is replaced.

12/24 Hour selection:

- 1. While in the normal display mode
- 2. Press and hold MINUTE button to change the watch from 12 to 24 hours or 24 to 12 hour display

TROUBLESHOOTING:

Watch not receiving the Time Signal - possible causes:

- Watch not placed near a window
 Watch not placed face down
- watch not placed face dov
- Watch placed on its side
- Outside the time-setting radio signal area
- Being in an area with a lot of construction
- Metal objects are blocking the radio signal
- Interference from another electronic device, such as a computer monitor or TV

 Place the watch near a window, as this gives the best reception. Try different windows in the house to see which is best. You
- Place the watch near a window, as this gives the best reception. Try different windows in the house to see which is best. You can test this using the reception status test described earlier. Please note that reception is always better at night.
- If your watch is unable to make contact with the radio signal, it will continue to function in the same way as a standard watch. The time will then be corrected the next time your watch receives the time signal.

Battery Replacement

This atomic keychain watch uses a CR2032 battery.

Open the BATTERY COVER with a coin by turning it counter-clockwise.

Carefully remove the old battery and replace it with a new one (ensuring that the polarity "+" is up).

Cover the battery with the battery cover and align the 2 dots. Then, lock the cover with a coin (turning it clockwise).

After Battery Replacement

The watch will not work after a battery is replaced until the following has been done.

- You need to set your Time Zone according to the "Set Time Zone" instructions.
- Position your watch face down on a flat surface near a non-metallic window.
- The atomic radio-controlled keychain watch will start to update its first signal. It will continue updating for 24 hours if the first signal reception is not successful.
- 4. After receiving a valid time signal, the watch will show the correct time.

Manufacturer's One Year Limited Warranty

Reizen guarantees this talking watch to be free of any manufacturer's defects for a period of one year from the date of purchase. We will fix or replace (at our discretion) your defective clock at no charge to you.

Customer abuse, neglect, or any attempt to open and repair the watch voids this warranty. For warranty service, please return the watch to the address below, postage paid, with your original receipt. Include a payment of \$5.50 to cover the return shipping. All returned clocks are subject to evaluation and approval.

REIZEN P.O. Box 3312

Farmingdale, NY 11735

Phone: 1-800-522-6294

Reizen is a preferred distributor of quality REIZEN products.